

SANPLAST.




Bza/PRESTIGE



BPza/PRESTIGE



Bza/PRESTIGE AxB

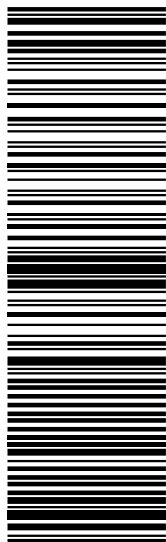


(01) 2000001926938 (94) AL BLank


PRESTIGE

- PL** Instrukcja montażu brodzika
- DE** Montageanweisung für Duschwanne
- GB** Installation instruction for shower trays
- FR** Notice de montage du receveur de douche
- RU** Инструкция по установке поддона
- CZ** Návod k montáži sprchové vaničky
- RO** Instrucțiuni de montare ale cuvei de duș
- HU** Zuhanytálca szerelési utasítás
- SK** Návod na montáž vaničky


PRESTIGE

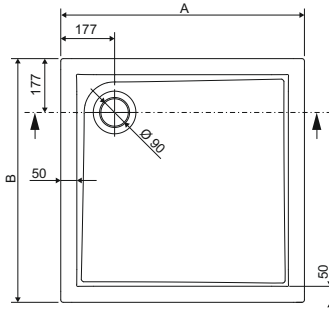





	A	B
Bza/PR 80x80x3	800	800
Bza/PR 90x90x3	900	900
Bza/PR 100x100x3	1000	1000

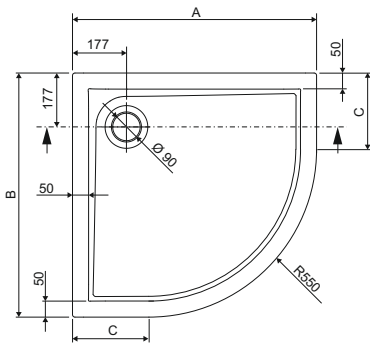

	A	B	C
BPza/PR 80x80x3	800	800	250
BPza/PR 90x90x3	900	900	350
BPza/PR 100x100x3	1000	1000	450

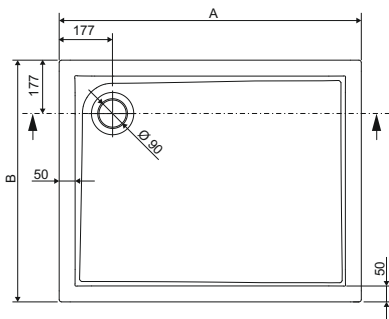

	A	B
Bza/PR 75x90x3	900	750
Bza/PR 80x90x3	900	800
Bza/PR 80x100x3	1000	800
Bza/PR 80x120x3	1200	800
Bza/PR 80x140x3	1400	800

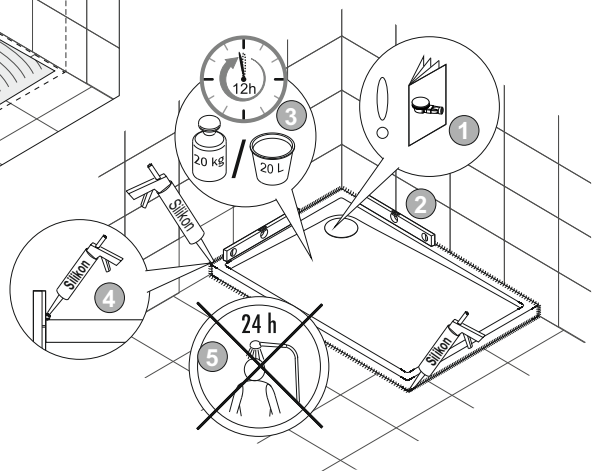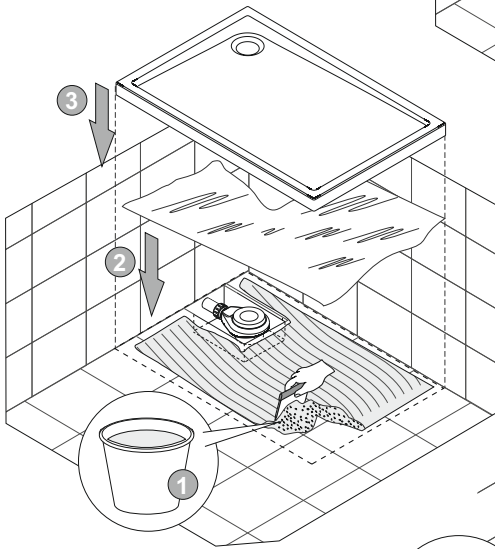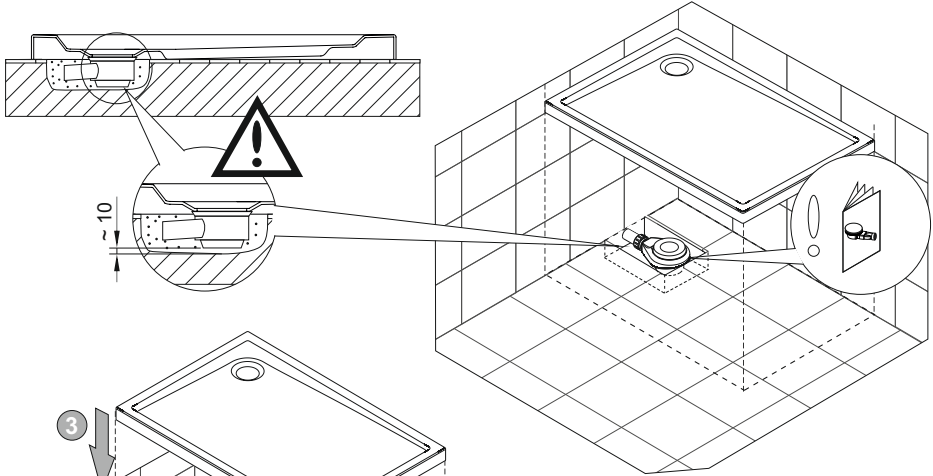

FR /ex. colle à carrelage + Film PE en vente dans le commerce

GB /e.g. tile adhesive + commercially available PE

PL /np.: elastyczny klej do płytek + dostępna na rynku folia PE

